



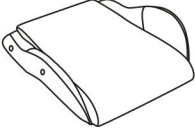


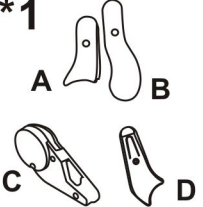

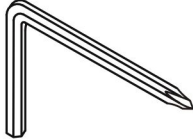

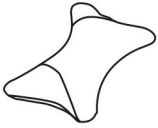

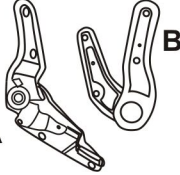



# Installation instructions

## Accessories list


<b>A*5</b> 	<b>B*1</b> 	<b>C*1</b> 	<b>D*1</b> 	<b>E*1</b> 	<b>F*1</b> 	<b>G*2</b> 
<b>H*1</b> 	<b>I*1</b> 	<b>J*1</b> 	<b>L*6</b> 	<b>M*1</b> 	<b>N*1</b> 	<b>O*1</b> 

## Installation instructions


**1**

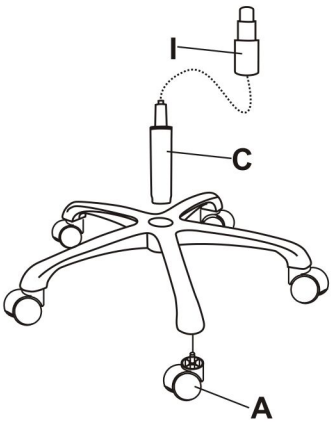


**2**

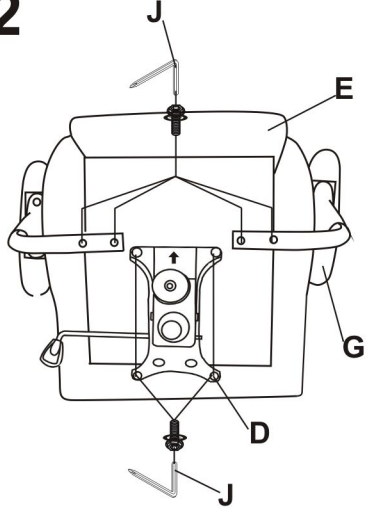

**3**

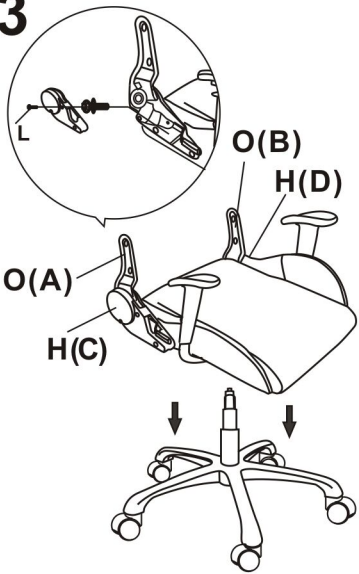

**4**

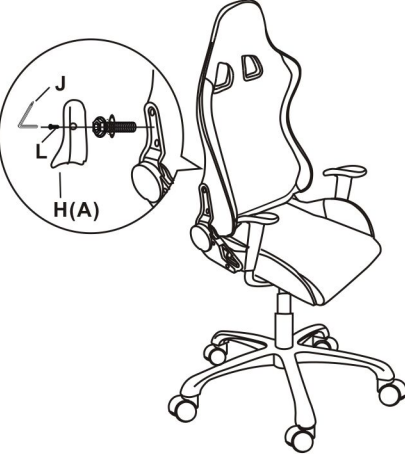

Install back, first screw the upper screws of two sides to fix the back, then screw the rest two.

**5**

