





SOFT, DRY CLOTH

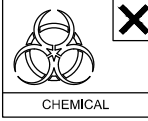

CHEMICAL

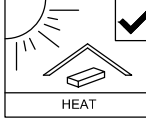

HEAT



KEEP DRY



HANDLE WITH CARE



DO NOT USE KNIFE


ASSEMBLY INSTRUCTION

MODEL : HM 2256


DESCRIPTION: TV CABINET

HARDWARE	A	B	C	D	E	F	G	H	I
WOOD DOWEL 8 X 25	MINIFIX 5654+5546	MINIFIX CAP	CB SCREW M4X45MM	CB SCREW M4X65MM	PLASTIC WALL ANCHOR	SCREW CAP	L KEY	PVC NAIL WITH PIN 5/8	
72	14 SETS	6	34	2	2	26	1	14	


PART LIST

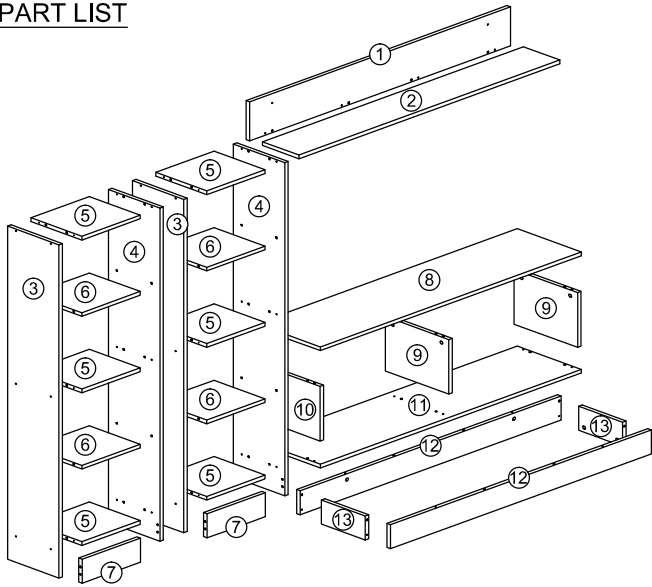


STEP 1

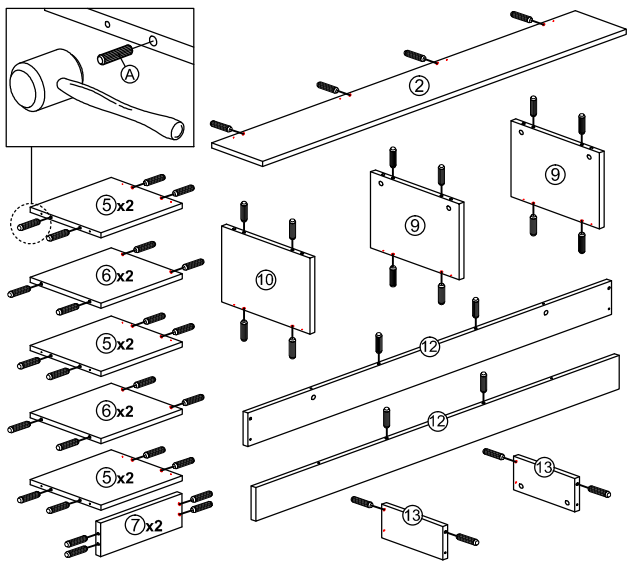


STEP 2

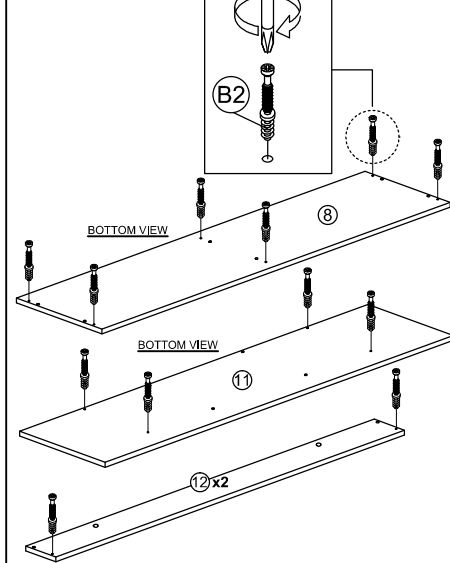


STEP 3

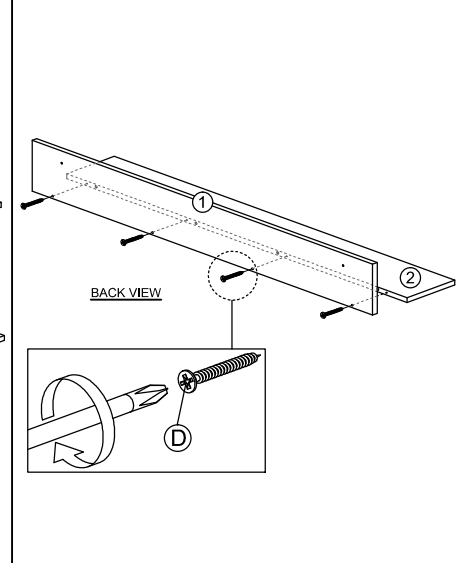


STEP 4

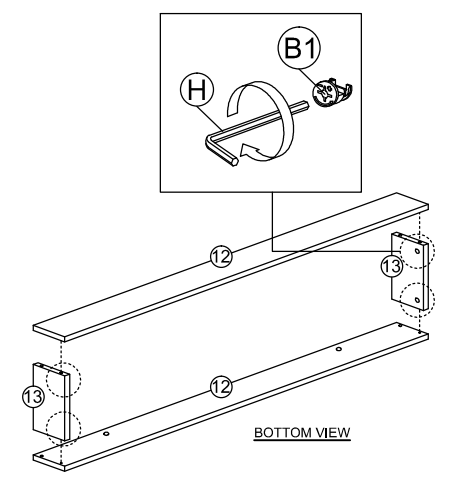


STEP 5

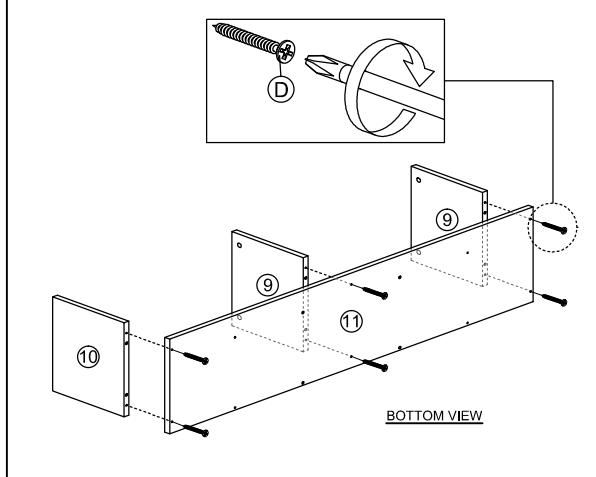

STEP 6

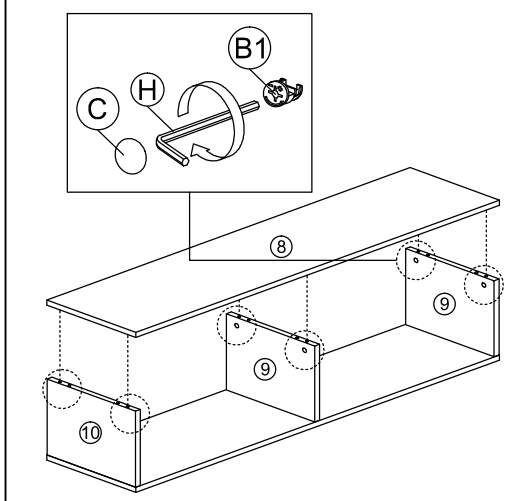

STEP 7

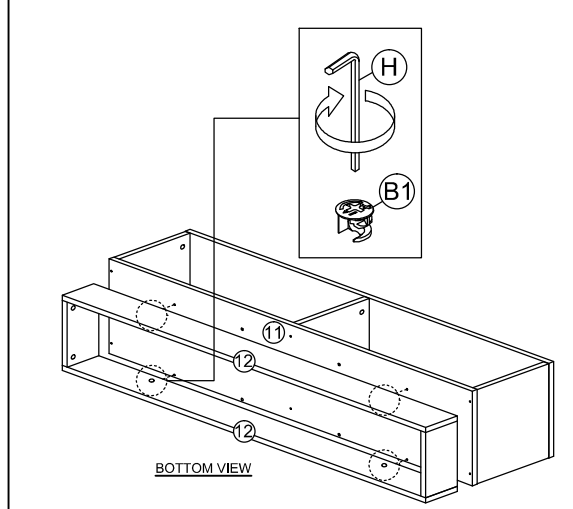




SOFT, DRY CLOTH



CHEMICAL




HEAT



KEEP DRY



HANDLE WITH CARE




DO NOT USE KNIFE

ASSEMBLY INSTRUCTION


MODEL : HM 2256

DESCRIPTION: TV CABINET


STEP 8

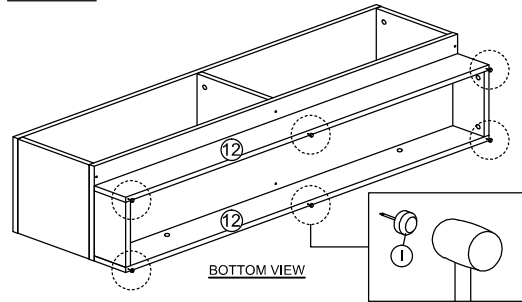


STEP 10

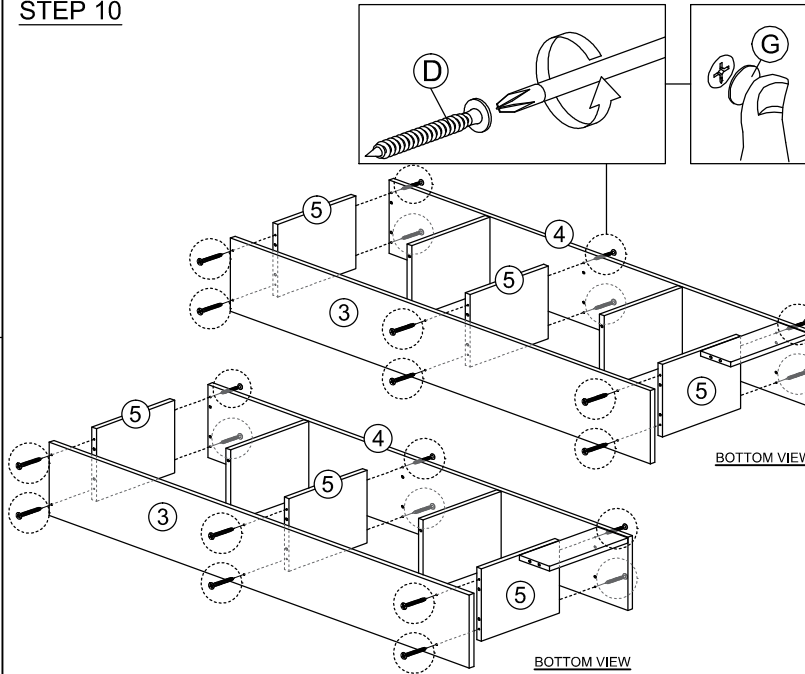


STEP 11

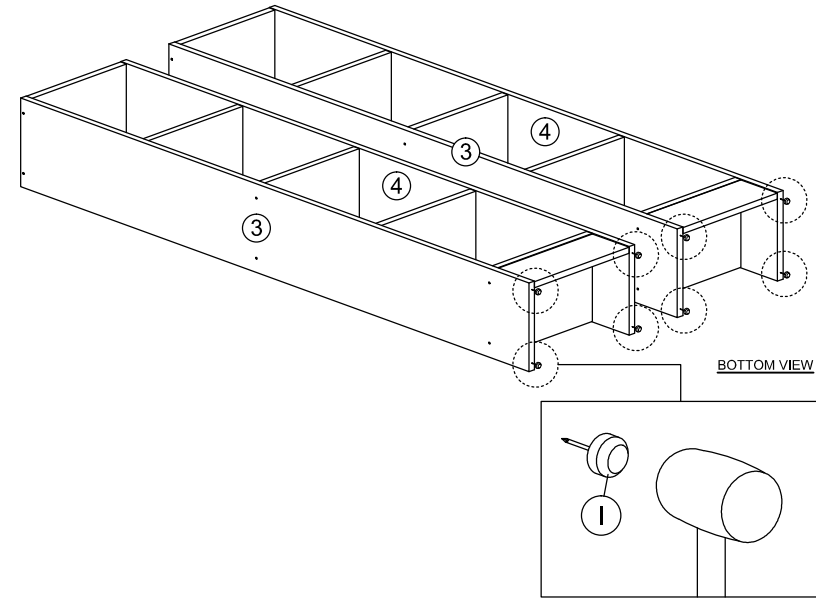


STEP 9

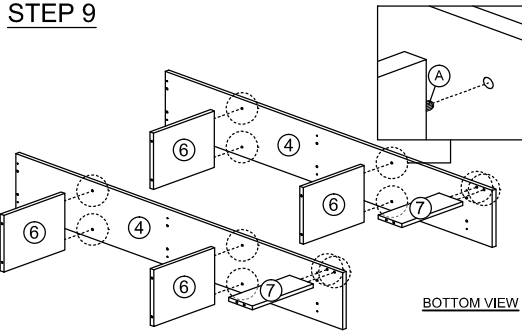

STEP 12

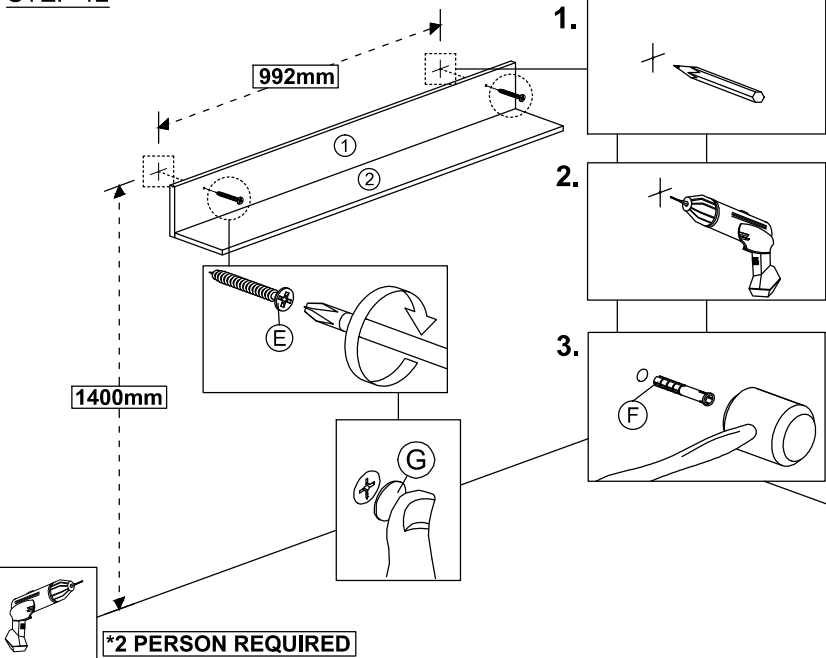

STEP 13

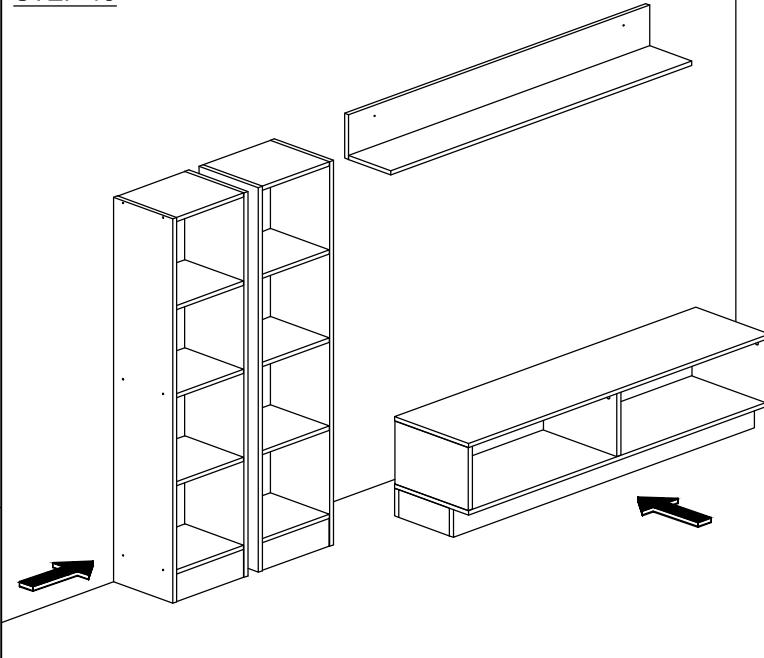

COMPLETED

