





SOFT, DRY CLOTH



CHEMICAL



HEAT



KEEP DRY



HANDLE WITH CARE



DO NOT USE KNIFE


ASSEMBLY INSTRUCTION

MODEL : HM 399.01


DESCRIPTION : QUEEN BED

HARDWARE	A	B	C	D	E	F	G	H	I
	WOOD DOWEL 8 X 25 1X10	CB SCREW M3.5X16MM 1X24	CB SCREW M4X38MM 1X36	NAIL 5/8 1X20	CSK CAP WOOD M6X50MM 1X12	CSK CAP WOOD M6X70MM 1X8	QUICKFIT CAP 1X20	L KEY 1X1	DRAWER SLIDE 18" 2 SETS


PART LIST

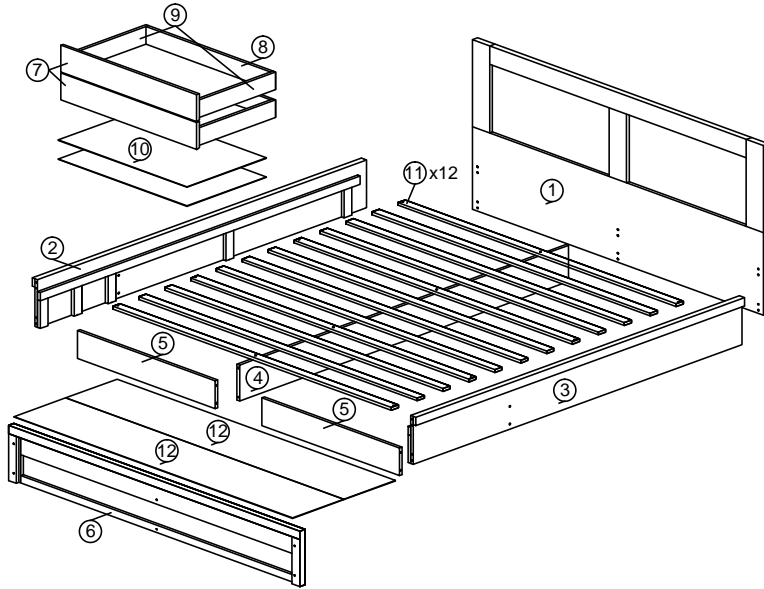


STEP 1

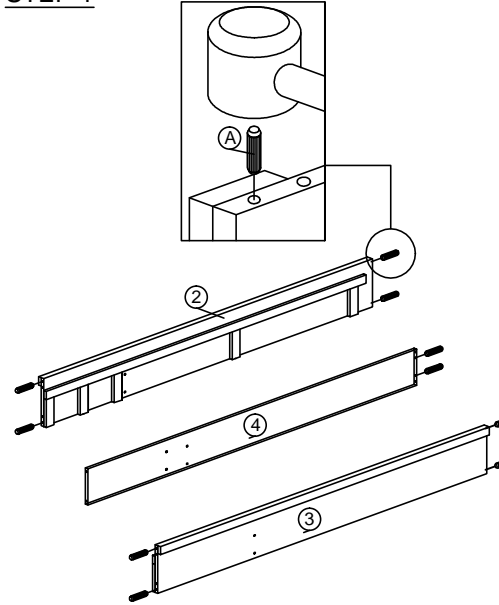


STEP 2

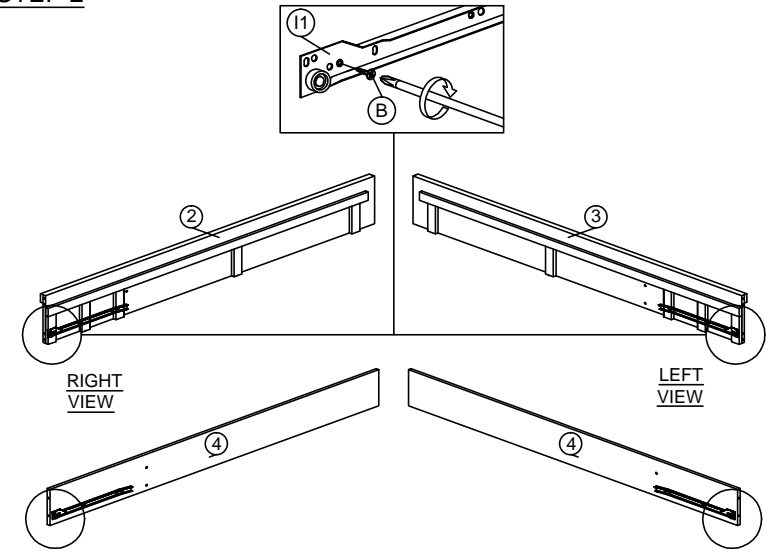


STEP 3

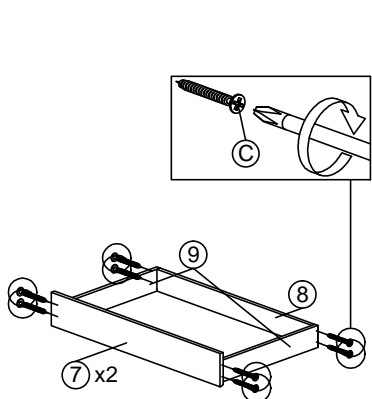


STEP 4


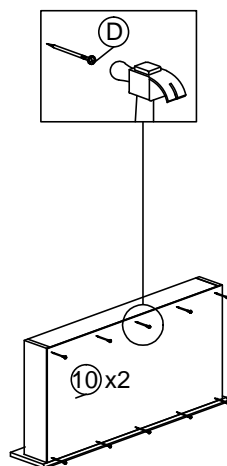


STEP 5

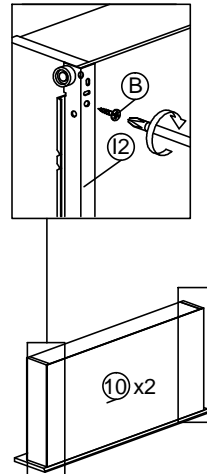

STEP 6

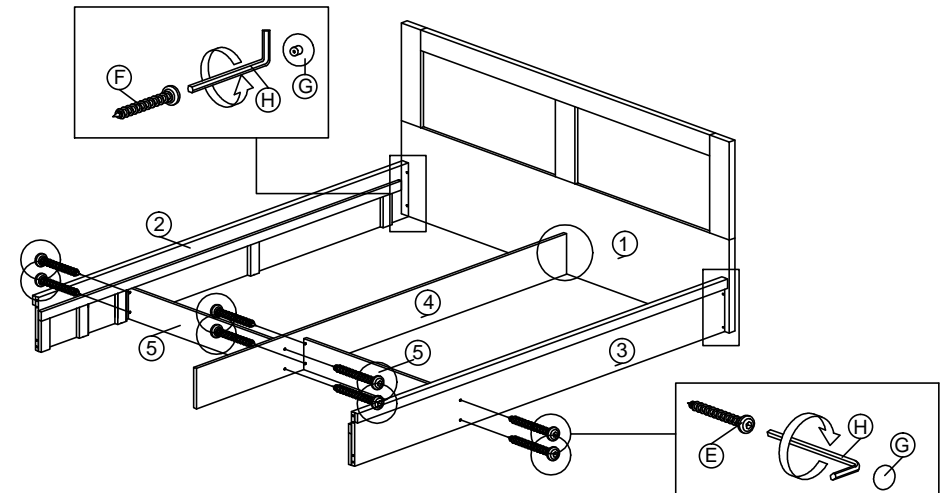






ASSEMBLY INSTRUCTION



MODEL : HM 399.01

DESCRIPTION : QUEEN BED


STEP 7

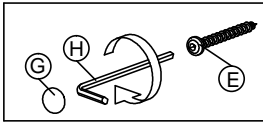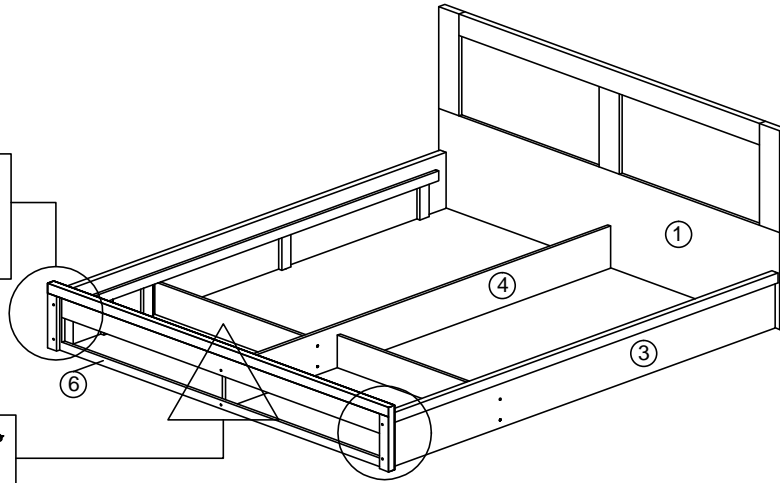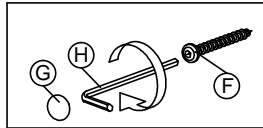

STEP 8

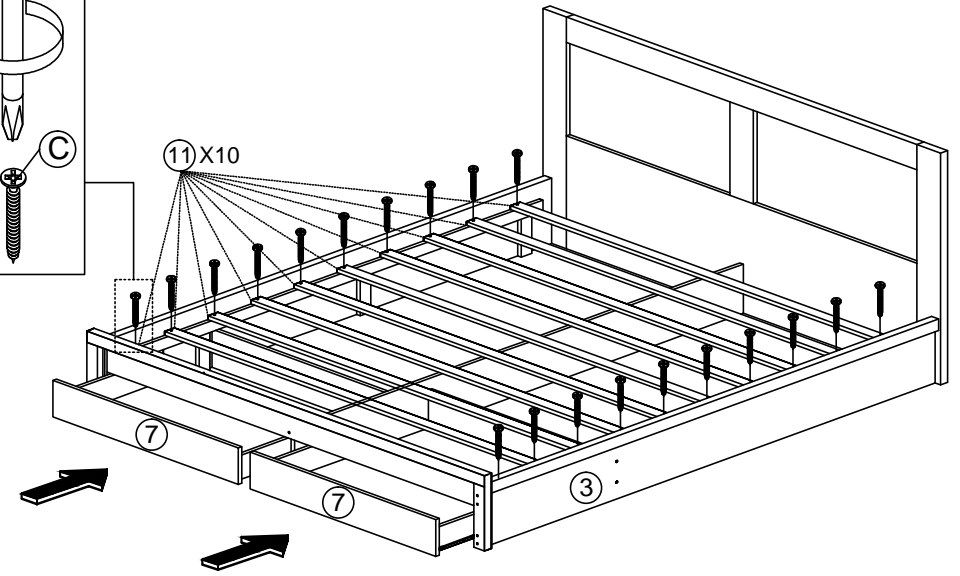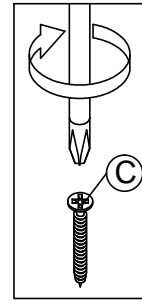

STEP 10

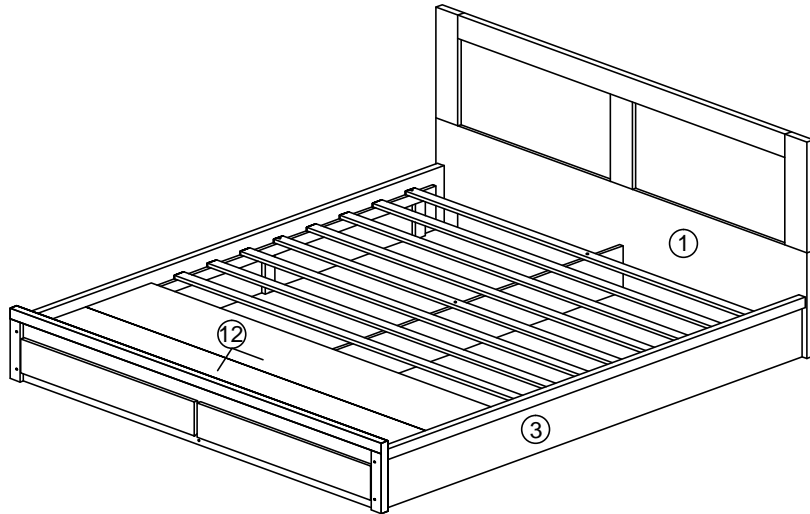

COMPLETED

