




SOFT, DRY CLOTH



CHEMICAL



HEAT



KEEP DRY



HANDLE WITH CARE

















DO NOT USE KNIFE


ASSEMBLY INSTRUCTION

MODEL : HM 2211


DESC : SHOE CABINET WITH 3 DOORS

HARDWARE	A	B	C	D	E	F	G	H	I	J	K	L	M	
														
	CB SCREW M3.5X16MM 1X26	CB SCREW M4X38MM 1X6	NAIL 5/8 1X23	3.5 KG MAGNET (1 HOLE) 3 SETS	PVC SHELF SUPPORT 1X16	DOOR SUPPORT SPRING 1X3	MAS R4 1X1	MAS L4 1X2	ROUND PLASTIC LEG (PVC) 1X5	MINIFIX 5654+5546 6 SETS	L-KEY 1X1	QUICKFIT CAP 1X6	HANDLE 5022 (METAL) 1X3	HANDLE SCREW M4X22MM 1X3


PART LIST

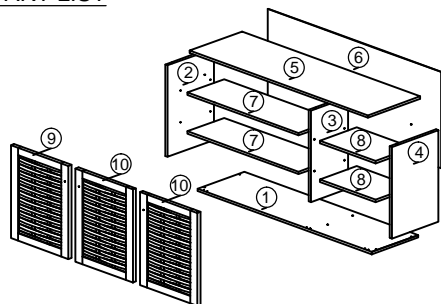


STEP 1

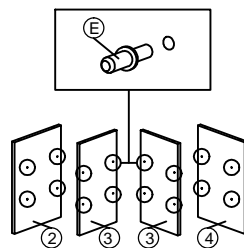


STEP 2

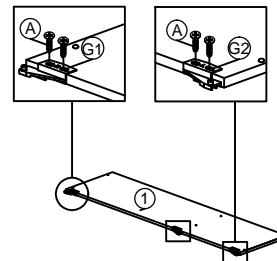


STEP 3

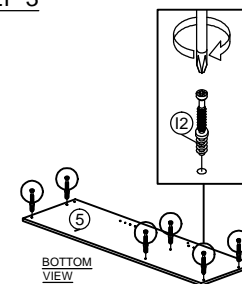


STEP 4

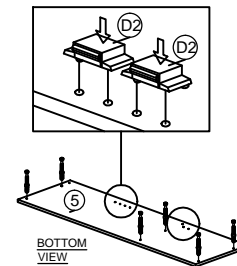


STEP 5

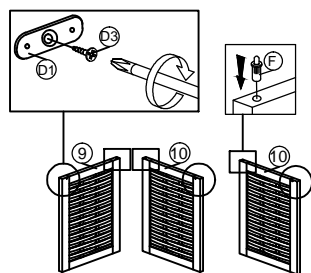


STEP 6

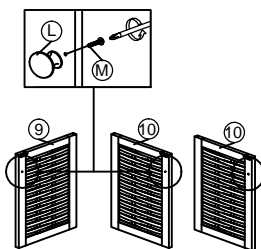


STEP 7

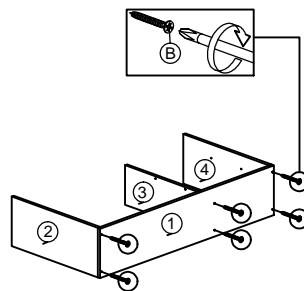


STEP 8

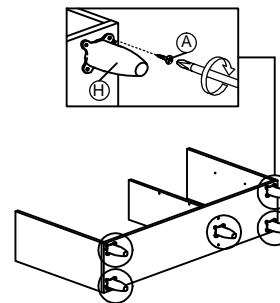


STEP 9

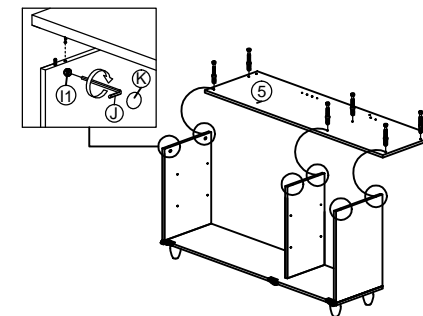


STEP 10

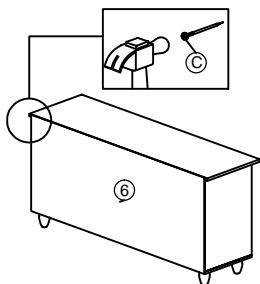

STEP 11

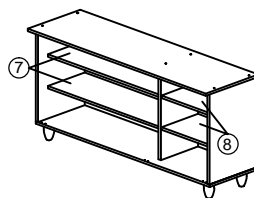

STEP 12

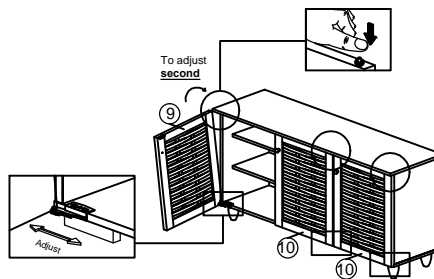

COMPLETED

